



GREENFIELD
WATER SOLUTIONS

Inline Under Sink Vortexer/Mineralizer



BENEFITS & FEATURES

- The Copper Vortexer is maintenance free for life
- Re-mineralizes, structures and energizes water
- Bidirectional Water Flow
- Increases pH creating alkaline water
- Increases hydrogen content of water
- Lowers ORP creating water with anti-oxidant properties
- Mineralizer cartridge treats 1500 gallons before replacing
- Compatible with any RO or standard water filter or as a stand alone product
- Install after the under sink RO tank or on the outlet side of any under sink water filter.

Contact us with questions or tech support at 208-462-0626 or zach@greenfieldwater.com.

Install Instructions

Tools required - Drill, Phillips screw bit, razor knife, tape measure, towel

1. Refer to image for what the installation should look like.
2. Choose location between water supply and water dispenser.
3. Loosely screw one side of each copper bracket to wall. Copper brackets should be placed so they are 1 3/4" apart outside dimension.
4. Insert the copper vortexer into the brackets and secure brackets to the wall.
5. Attach plastic brackets to the mineralizer cartridge and push other side of brackets onto the copper vortexer.
6. Turn off the water supply and open faucet.
7. Cut 1/4 poly tube supply line at halfway point between the faucet and the shut off valve. Be sure all tubing cuts are straight and clean.
8. Attach 1/4" x 3/8" push connector on each end of cut 1/4" tubing.
9. Cut just enough 3/8" tubing to attach the supply line into the push connector on the mineralizer. All inlets and outlets for the mineralizer and vortexer are bidirectional.
10. Cut just enough 3/8" tubing to attach the dispenser line to the outlet side of the vortexer.
11. Use remaining tubing to connect the outlet of the mineralizer to the inlet of the vortexer. Ensure for a gentle loop of the tubing regardless of which ends are used for connecting the vortexer and mineralizer.
12. Turn on the water and check for leaks. If leaking, tubing may need to be pushed further into the end connectors on the mineralizer or vortexer. Periodically check for leaks for the next 24 hours.
13. Allow a few days for all the fines to flush from the mineralizer. Fines are not harmful.

Call 208-462-0626 for tech support.

