



Four Stage Under Counter Structured Water Filter Install Guide

Step 1 - Inventory Parts Received

1. This Instruction Sheet
2. Filter Housing (assembled)
3. 2 small mounting screws
4. Water Supply Tee Connector -
(3/8 push connector x 3/8 male
compression x 3/8 female compression)
5. Faucet assembly
6. Connecting tubing (3/8 plastic)
7. Faucet connectors (white plastic)
8. Filter housing removal tool (looks like a
round screw driver)
9. Filters already installed
10. Vortexor already installed
11. Harmonizer already installed

Step 2 - Install Filter Housing

1. Select a suitable location for the filter
housing under the sink.
 - a. Location should be accessible for filter
cleaning and/or replacement.

NOTE: The flow arrow embossed on the
top of the head indicates the filter inlet,
2. Optional - Secure the bracket and head
assembly to the side of the sink cabinet in
the desired location with the two (2) small
mounting screws.

Step 3 - Install the Water Supply Tee Connector (use teflon tape for all threaded connections)

1. Turn off the cold water supply valve under the sink. If there is no valve, turn off the water to your house at the main meter.
2. Open the cold water faucet to let off the pressure. Make sure the valve is off and the faucet is not dripping.



3. Unscrew the nut that holds the cold water supply line into the pipe where you just turned the water off from.
 4. Install the Tee Connector onto the exposed threads and tighten.
 5. Screw water faucet supply line back onto the tee connector.
- NOTE: Do NOT turn the cold water line back on yet, the water will flow directly out of the tee connector and flood your kitchen.

Step 4 - Install the Accessory Water Dispenser or Direct to Kitchen Faucet

1. Select a suitable location for the accessory water dispenser as close to the sink as possible allowing convenient space under the sink for assembly. If not using the extra sink hole, drill the sink top with a 1/2" bit to accommodate the inlet pipe.
2. Assemble the water dispenser to the sink top:
 - a. Remove the push fit adaptor, the brass nut and the lock washer from the inlet pipe.
 - b. Insert the valve through the sink top to seat the rubber washer.
 - c. Replace the lock washer and brass nut and tighten firmly with a wrench.
 - d. Attach the push-fit faucet connector directly onto the metal pipe end.

Direct to Kitchen Faucet Install

1. Two additional parts were sent if you requested this option; a brass connection cap already attached to the water tee fitting and a brass reducer already connected to the push connector for the outlet line to be connected to your cold water supply hose to your kitchen faucet.

Step 5 - Install Connecting Tube

1. Cut two pieces of the 3/8 plastic tubing to fit from the water supply to the inlet of the filter housing and from the outlet of the filter to the water dispenser.
 - A. Tubing from water supply to filter housing inlet:
 - a. Insert one end of tubing into outlet push connector of the tee fitting.
(seat completely into push connector fitting)
 - b. Insert other end of tubing into inlet push connector of filter housing.
(seat completely into push connector fitting)
 - B. Tubing from filter outlet on top of the housing to the water dispenser.
 - a. Both ends of tubing are to be inserted into the push connectors.

Step 6- Filter Elements, Vortexor and Harmonizer are already installed.

Step 7- Start-Up


1. Open the tap fully by lifting the lever to its vertical position to allow trapped air and water to flow out of the system.
2. Turn water on at the main inlet of the cold water supply. Water should start flowing out of the faucet once housing has filled with water.
4. Once water begins to flow out of the faucet after air is expelled, turn off water flow and let stand for 20 minutes. Turn water flow back on and flush the system for a five minutes to allow residual particles to be expelled during this first flush; this is normal. The system is now ready for use. Taste will improve once filters are completely flushed of residual particles.
5. Note and record the date; check the condition of the filter element in about six months, or earlier if flow rate drops off noticeably.

Troubleshooting

1. No flow of water through the system: Check the plastic tubing for kinks, or obstructions.
2. Water leaks:
 - a. At the push fittings: inspect to be sure tubing has been fully sealed.
 - b. At the tee connector: insure all fittings are tight.
 - c. At the housing: verify that the housing has been fully tightened.

Rated Service Flows: CeraMetix 1.0 gpm, AquaMetix® 1.0 gpm
Maximum Working Pressure: (125 psig) Maximum Working Temperature: 38° C (100° F)
Minimum Operating Pressure: (10 psig) Minimum Operating Temperature: 5° C (41° F)

Fully Installed DIY System

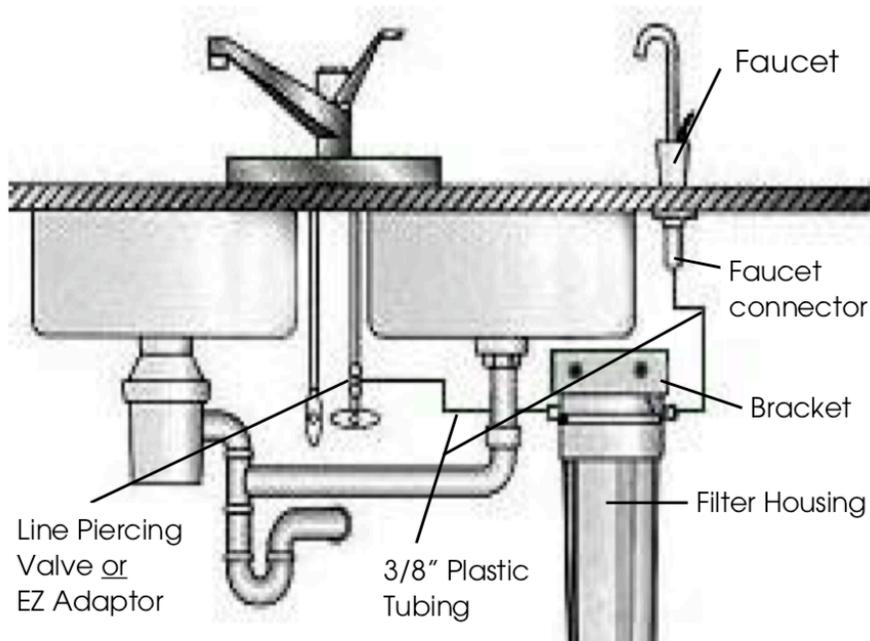

Cleaning and Maintenance

1. If your water supply contains a lot of solid particles, the flow rate from the filter may drop rather quickly. If this happens, the ceramic filter can be cleaned
2. Shut off water supply to cold water line.
3. Remove the ceramic cartridge from the housing.
4. Scrub the ceramic candle, using a scouring pad (3M ScotchBrite pad recommended) under cold running water to remove the accumulated material and expose a fresh ceramic surface.
5. DO NOT USE SOAPS, DETERGENTS, OR BLEACH TO CLEAN THE CERAMIC CARTRIDGE.
6. Only the ceramic filter cartridges can be cleaned.

For Support Call 208-462-0626 or 208-596-6858